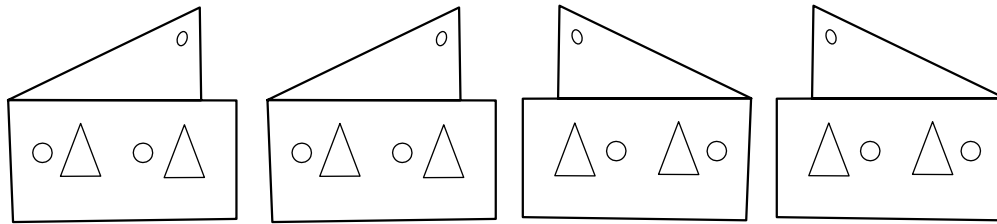

BEFORE YOU BEGIN

Please check to ensure you have all of the below items before you begin installation of your product.

- Bass trap(s) (quantities based on your order.)
- Mounting hardware for all size traps:
 - 4 corner impaling clips (per bass trap.)
 - 8 drywall anchors (per bass trap.)
 - 8 drywall screws (per bass trap.)



IF YOU ARE MISSING ANY REQUIRED ITEMS FROM YOUR ORDER,
PLEASE CONTACT US ONLINE [HERE](#).

Corner Install:

STEP 1

Determine the location of where the bass traps will be mounted to the wall.

Lightly mark the wall where the corner impaling clips will be installed.

Note: ensure that the corner impalers are located at least 6" from the bottom or top edge of your bass trap.

STEP 2

Mount clips to the wall surface using the provided screws and drywall anchors.

STEP 3

Line up the bass trap to the wall marks and firmly push the panel down onto the corner impaling clips.

Employ a level to verify the bass trap is straight and plumb. Repeat process for multiple bass traps.

Ceiling Install:

Same method as above, with the following additional step:

Add **Power Grab Adhesive** (available separately) to the mating surface of each impaling clip.

