

---

---

## BEFORE YOU BEGIN

Please check to ensure you have all of the below items before you begin installation of your product.

### Items Supplied by Acoustics America

- Check that the quantities, colors and sizes of baffles received match your order receipt.
- **Mounting Hardware:** based on your option selection.
- 1" thick baffles include (2) 1" Corkscrew hangers per baffle.
- 2" thick baffles include (2) 2" Corkscrew hangers per baffle.



1" Corkscrew  
Hanger



2" Corkscrew  
Hanger

IF YOU ARE MISSING ANY REQUIRED ITEMS FROM YOUR ORDER,  
PLEASE CONTACT US ONLINE [HERE](#).



## **Measure and Mark**

1. Determine the desired location for the acoustic baffle.
2. Use a measuring tape and pencil to mark the spots on the ceiling where the eye hooks will be installed. Ensure the marks are evenly spaced and aligned with the baffle's mounting points

## Prepare the Baffle

### STEP 1

Place the Baffle on a flat surface and locate the marked hole on the top of the Baffle. (FIGURE 1)



### STEP 2

Align the spring to the hole in the direction as in the picture. Holding the spring vertically, press down lightly and twist in a straight down motion. (FIGURE 2)



### STEP 3

Keep twisting down on the spring and twist in a straight motion downward. (FIGURE 3)



## Prepare the Baffle, Continued


### STEP 4

Towards the End use the D hook to screw the spring firmly in the baffle. It should look like this as in Fig 5. (FIGURES 4 AND 5)



### STEP 5

Attach the eye-loop on the D hook of the installed spring and check for fit. (FIGURE 6)

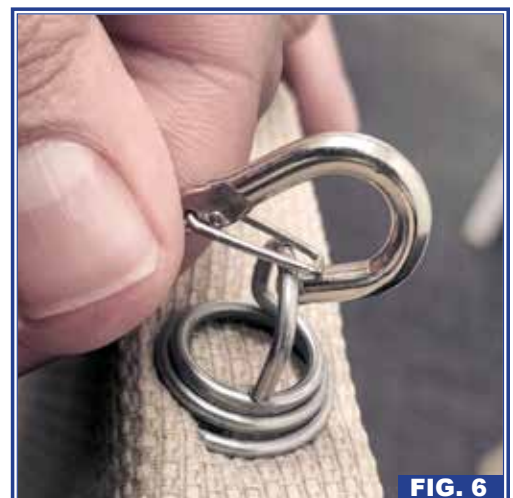

## Suspend the Baffle

### STEP 6

Press the wire downward so that it comes out of the recess.

Adjust the length according to the desired height of the baffle. Repeat for all the other hooks.  
(FIGURES 7 AND 8)



### STEP 7

Ensure all hooks are inserted properly and are at a same level. (FIGURE 9)

