



---

## **BEFORE YOU BEGIN**

Please check to ensure you have all of the below items before you begin installation of your product.

### **Items Supplied by Acoustics America**

Check that the quantities, colors and sizes of shapes received match your order receipt.

- **10 polyester shapes**
- **Double-sided adhesive tape**

If you are missing any required items from your order,  
contact us at: <https://acousticsamerica.com/orderissue> or call us at **1-800-569-4907**.





## **Installation Steps (Square & Hexagon):**

### **Surface Preparation:**

- Surfaces should be clean and dry, free of oils or other contaminants. Use a lint-free cloth to clean the surface using a mild detergent and let dry thoroughly.
- Not for use on extremely porous surfaces, damp surfaces, high humidity environments, surfaces below 50° F or above 100° F, or surfaces with loose paint or other loose surface coatings.
- Not be used on fine wood or delicate surfaces.
- Tape may adhere firmly to drywall or paint and require wall patching or touchup, if removed. If this may be an issue, do not use tape and instead hang panel with alternative hardware (not included.)

### **Application:**

1. Ensure proper surface prep as noted above.
2. Roll out a strip of double-sided adhesive tape for the top and bottom of each panel.
  - a. Square and Hexagon shapes use strips roughly 8" long

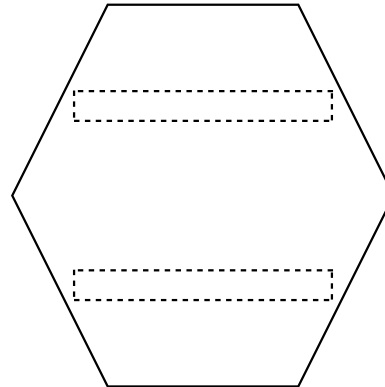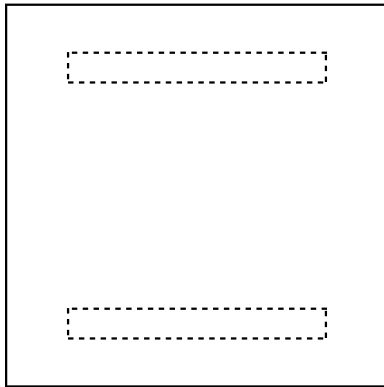

3. Cut the tape.
4. Remove the backing film from the tape and adhere to the center of the panel, but do not remove the film from the mounting surface side. Tape should be pressed firmly by rubbing with thumb 5 or more times to attach tape well to the panel.
5. Once panel placement has been determined, remove the backing film from the mounting surface side.
6. Once backing is removed, avoid touching the adhesive surface.
7. Place the panel directly on the desired mounting area, avoid shifting once contact is made.




## Installation Steps (Rectangle):

### Surface Preparation:

- Surfaces should be clean and dry, free of oils or other contaminants. Use a lint-free cloth to clean the surface using a mild detergent and let dry thoroughly.
- Not for use on extremely porous surfaces, damp surfaces, high humidity environments, surfaces below 50° F or above 100° F, or surfaces with loose paint or other loose surface coatings.
- Not be used on fine wood or delicate surfaces.
- Tape may adhere firmly to drywall or paint and require wall patching or touchup, if removed. If this may be an issue, do not use tape and instead hang panel with alternative hardware (not included.)

### Application:

1. Ensure proper surface prep as noted above.
2. Roll out a strip of double-sided adhesive tape for the top and bottom of each panel.
  - a. Rectangle shapes in the landscape position use strips roughly 16" long
  - b. Rectangle shapes in the portrait position use strips roughly 8" long

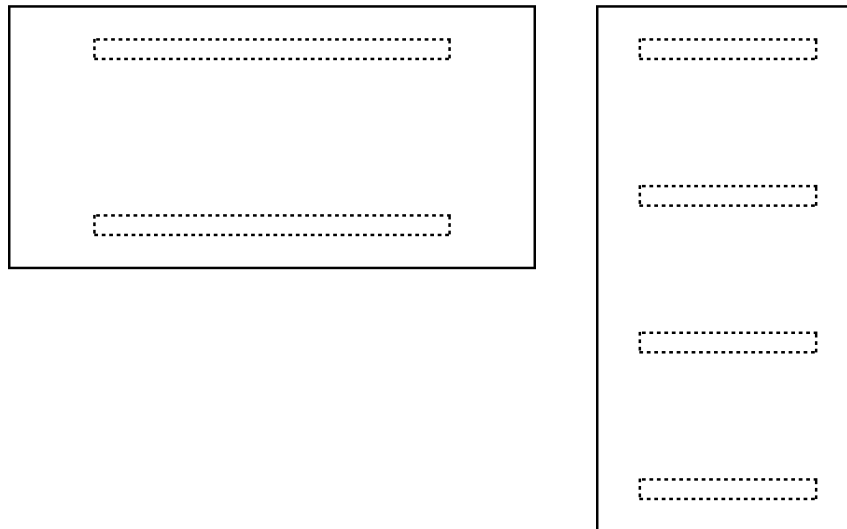

3. Cut the tape.
4. Remove the backing film from the tape and adhere to the center of the panel, but do not remove the film from the mounting surface side. Tape should be pressed firmly by rubbing with thumb 5 or more times to attach tape well to the panel.
5. Once panel placement has been determined, remove the backing film from the mounting surface side.
6. Once backing is removed, avoid touching the adhesive surface.
7. Place the panel directly on the desired mounting area, avoid shifting once contact is made.