



BEFORE YOU BEGIN

Please check to ensure you have all of the below items before you begin installation of your product.

Items Supplied by Acoustics America

Check that the quantities, colors and sizes of shapes received match your order receipt.

- **10 polyester shapes**
- **Double-sided adhesive tape**

If you are missing any required items from your order,
contact us at: <https://acousticsamerica.com/orderissue> or call us at **1-800-569-4907**.



Installation Steps (Square & Hexagon):

Wall Surface Preparation:

- Wall surface should be clean and dry, free of oils or other contaminants. Use a lint-free cloth to dust the wall surface.
- Not for use on extremely porous wall surfaces, damp surfaces, high humidity environments, wall surfaces below 50 °F or above 100 °F, or wall surfaces with loose paint or other loose surface coatings.
- Not to be used on fine wood or delicate wall surfaces.
- Double-sided adhesive tape may adhere firmly to drywall or paint and require wall patching or touchup, if removed. If this may be an issue, do not use tape and instead hang panel with alternative hardware (not included.)

Application:

1. Ensure proper wall surface prep as noted above.
2. Roll out a strip of double-sided adhesive tape for the top and bottom of each panel and cut.
 - a. Square and Hexagon shapes use strips roughly 8" long

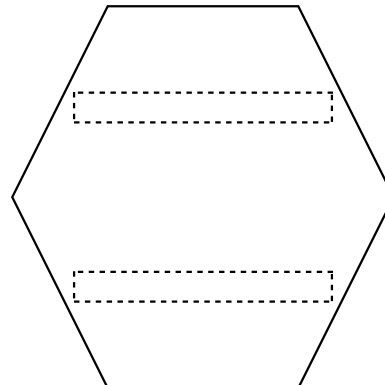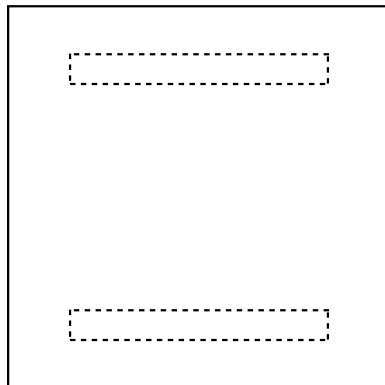

3. Adhere the double-sided adhesive tape to the backside of the panel as shown in the diagram above, but do not remove the film from the wall surface side. Tape should be pressed firmly by rubbing with thumb 5 or more times to attach tape well to the panel.
4. Once panel placement has been determined, remove the backing film from the wall surface side, avoid touching the adhesive.
5. Firmly press the panel directly to the wall mounting surface, avoid shifting once contact is made.




Installation Steps (Rectangle):

Wall Surface Preparation:

- Wall surface should be clean and dry, free of oils or other contaminants. Use a lint-free cloth to dust the wall surface.
- Not for use on extremely porous wall surfaces, damp surfaces, high humidity environments, wall surfaces below 50 °F or above 100 °F, or wall surfaces with loose paint or other loose surface coatings.
- Not to be used on fine wood or delicate wall surfaces.
- Double-sided adhesive tape may adhere firmly to drywall or paint and require wall patching or touchup, if removed. If this may be an issue, do not use tape and instead hang panel with alternative hardware (not included.)

Application:

1. Ensure proper wall surface prep as noted above.
2. Roll out a strip of double-sided adhesive tape for the backside of each panel.
 - a. Rectangle shapes in the landscape position use two (2) strips roughly 16" long
 - b. Rectangle shapes in the portrait position use four (4) strips roughly 8" long

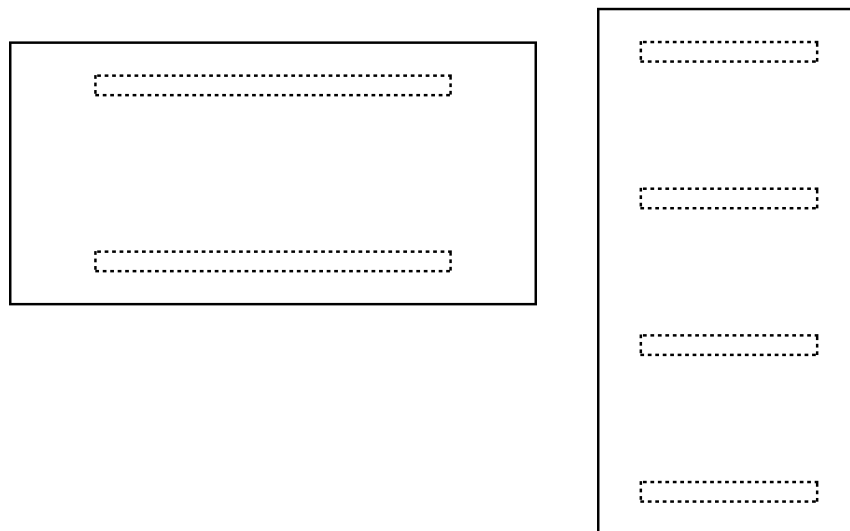

3. Adhere the double-sided adhesive tape to the backside of the panel as shown in the diagram above, but do not remove the film from the wall surface side. Tape should be pressed firmly by rubbing with thumb 5 or more times to attach tape well to the panel.
4. Once panel placement has been determined, remove the backing film from the wall surface side, avoid touching the adhesive.
5. Firmly press the panel directly to the wall mounting surface, avoid shifting once contact is made.