



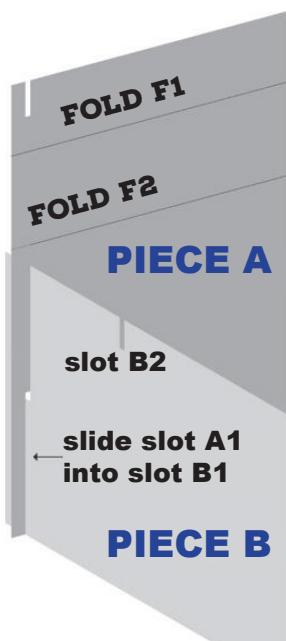

Your workstation is shipped folded backwards. After unpacking, turn each piece over and lay flat on a clean surface. **Note: slots will NOT line up correctly if assembled backwards.**

**PIECE A** - Main Center Panel

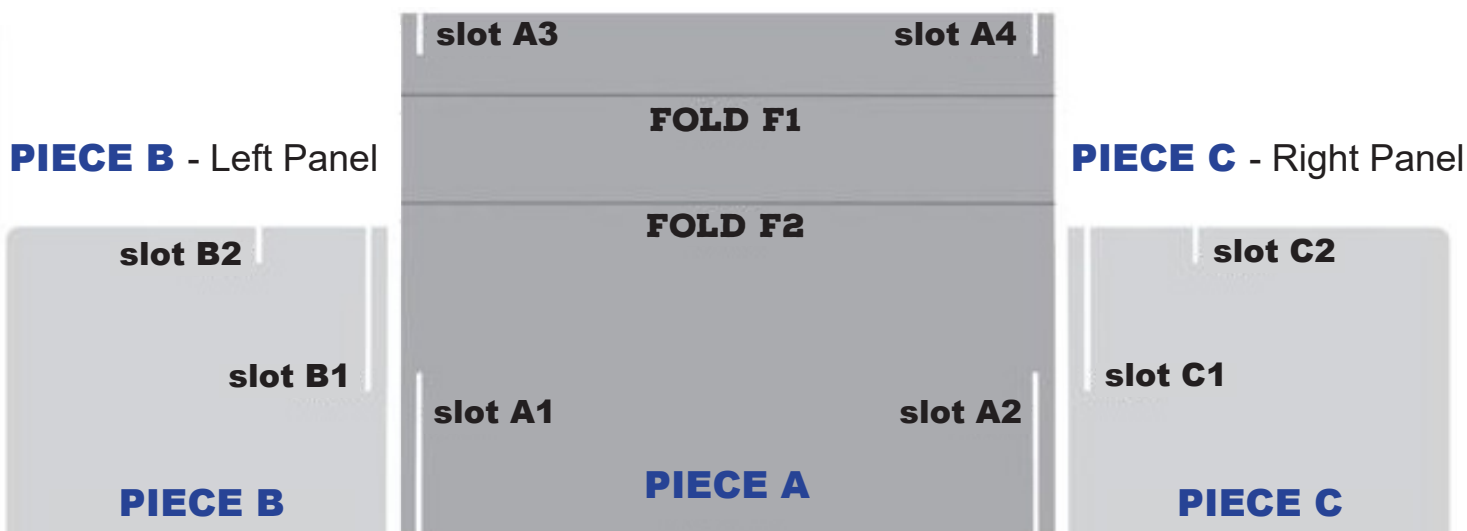



**STEP 1 - Connect  
the left panel to  
main center panel**

Slide Slot A1 on Piece A  
into Slot B1 on Piece B

**STEP 2 - Connect  
the right panel to  
main center panel**

Slide Slot A2 on Piece A  
into Slot C1 on Piece C

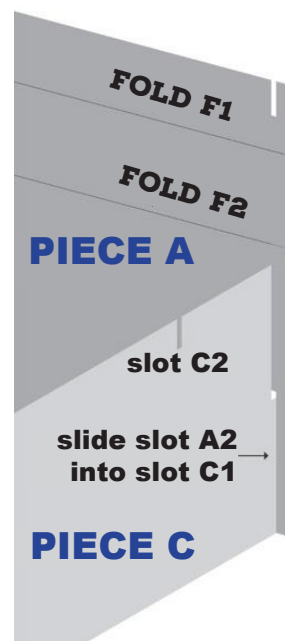

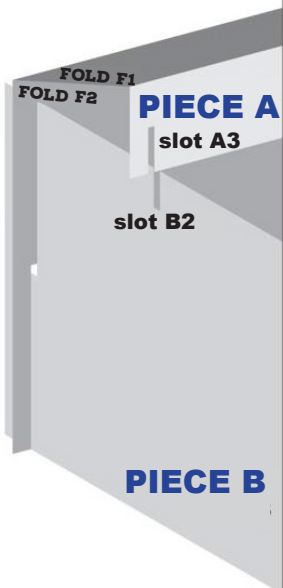


**STEP 3 - Fold the top of main center panel down and secure to left panel**

Fold the top of Piece A along the fold lines F1 and F2.  
Slide Slot A3 into Slot B2 on Piece B.

**STEP 4 - Secure the right side to top of main center panel**

Slide Slot A4 on Piece A into Slot C2 on Piece C.

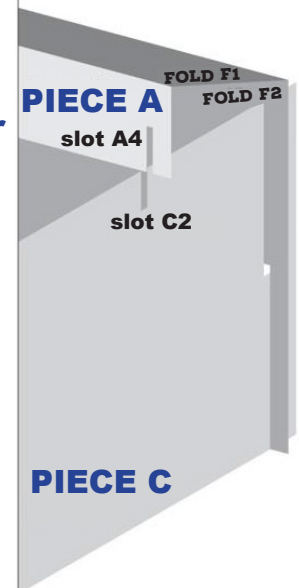

**STEP 5 - Final Check**

Make sure all panels are connected at right angles.  
Place the assembled workstation in your desired location.

